

 







 



 






 

 

 


 

 
 
 



 


 




 

 

 






Original	Substitut	Original	Substitut
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 Shift + Pause / Step /
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Smart / List
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat

Original	Substitut	Original	Substitut
 Power	 Mute	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 RETURN	 EXIT	 BACK
 CANCEL	 LIST	 SMART	 CH PAGE
 + VOL	 MEDIA	 DISPLAY	 TV
 TV	 DVD	 CD - STB	 VIDEO
 1	 TAPE	 TUNER	
 2	 USB	 BLUETOOTH	 AUX - HDD
 3	 HDMI - BAT	 PC	 USB
 4	 FAV MARKER	 GUIDE EPG	 HDMI - BAT
 5	 NETFLIX	 APP	 FAV MARKER
6	SEARCH	REPEAT	 GUIDE EPG
7	REPEAT A-B	RANDOM	 HDMI - BAT
8			 FAV MARKER
9			 GUIDE EPG





Original	Substitut
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Picture / Format
	TV/Radio /
	Sleep / Timer
	Subtitle / EQ
	Info / Angle
	D.Menu / Top
	Audio / Lang I/II
	Display / Media
	Text / Goto
	Zoom / Size
	Play / Slow
	Pause / Step / Freeze
	Setup / OPT /
	Stop / Hold
	Shift + Stop / Hold

Original	Substitut
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+

