


 



 
 
 









Original	Substitut
	Power
	Picture / Format
	Back / Return
	Menu / Home
	Up
	Left
	OK
	Right
	Down
	Exit / Cancel / Clear
	Stop / Hold
	Smart / List
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	>>I / Preset+
	CH+ / Page+

Original	Substitut
	Vol-
	Vol+
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Mute / Dimmer
	Rec / Rec Mode
	AV / Input / RDS
	Setup / OPT /
	Subtitle / EQ
	Display / Media
	Fav / Marker / PC
	Guide / EPG / -/-
	Shift + Smart / List
	Info / Angle







 

Original		Substitut	
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
0	0	HDMI - BAT 0	0
TEXT MEDIA CENTER	Text / Media	GOTO TEXT	Text / Goto
SOUND	Sound	TITLE SOUND	Sound / Title
REPEAT	Repeat	SIZE ZOOM	Zoom / Size
		SHIFT + APP	Shift + Green / APP /

Original		Substitut	





Original	Substitut	Original	Substitut
	Power		Power
	(•J)		TV/Radio /
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	Iptv		Display / Media
	Eco/Search		Fav / Marker / PC
	Guide/ Popup		Guide / EPG / -/--
	Ch.List		Shift + Smart / List
	Info		Info / Angle





Original	Substitut
1	TV 1
2 ARC	DVD 2
3 DEF	CD - STB 3
4 DISC	VIDEO 4
5 INCL	TAPE 5
6 MIND	TUNER 6
7 PPRS	AUX - HDD 7
8 TVV	USB 8
9 NXYZ	BLUETOOTH 9
DISC MENU	TOP MENU / D.MENU / D.Menu / Top
0	HDMI - BAT 0
TEXT / MEDIA CENTER	GOTO / TEXT / Text / Goto
SOUND	TITLE / SOUND / Sound / Title
◀ ▶ ⬇ ⬆	SIZE / ZOOM / Zoom / Size
REPEAT	SHIFT + APP / Shift + Green / APP /

Original	Substitut

