 



 









 















 









 



 







 



 















Original	Substitut	Original	Substitut
 Power	 Power	 Text	 Text / Goto
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 Play/Pause/Hold	 Play / Slow	 Menu	 Menu / Home
 Pause	 Pause / Step / Freeze	 Up	 Up
 Stop/Size	 Stop / Hold	 ??	 Info / Angle
 Rec Menu	 Rec / Rec Mode	 Left	 Left
 <<	 << / Tune-	 OK	 OK
 >> / Cancel	 >> / Tune+	 Right	 Right
 I<< / Index	 I<< / Preset-	 Exit	 Exit / Cancel / Clear
 >>I/Reveal	 >>I / Preset+	 Down	 Down
 Nicam	 Audio / Lang I/II	 Back	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Aspect	 Picture / Format	 List	 Smart / List
 Sleep	 Sleep / Timer	 CH+	 CH+ / Page+
 Tv	 TV/Radio /	 Vol-	 Vol-
 Subpage	 D.Menu / Top	 Display	 Display / Media
 PC Auto	 Setup / OPT /	 CH-	 CH- / Page-





	Original	Substitut		Original	Substitut
	1	TV 1	1	DTV/RADIO	SHIFT + PROGRAM TV/RADIO / Program
	2	DVD 2	2	Media	SHIFT + MEDIA Display / Media
	3	CD - STB 3	3	-/--	SHIFT + GUIDE EPG / -/--
	4	VIDEO 4	4	Repeat	SHIFT + APP Green / APP / Repeat
	5	TAPE 5	5	A-B	SHIFT + YouTube Yellow / YouTube / Repeat A-B
	6	TUNER 6	6		
	7	AUX - HDD 7	7		
	8	USB 8	8		
	9	BLUETOOTH 9	9		
	TVG	GUIDE EPG	Guide / EPG / -/--		
	0	HDMI - BAT 0	0		
	FAV	PC FAV MARKER	Fav / Marker / PC		
	Red	NETFLIX SEARCH	Red / Netflix / Search		
	Green	APP REPEAT	Green / APP / Repeat		
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat		
	Blue	Prime Video RANDOM	Blue / Prime Video / Random		
	Freeze	SHIFT + STEP - FREEZE 	Shift + Pause / Step / Freeze		

