



 

 





 

 



 



 









 

 







 

 



 









 



 



 













 



























 

Original	Substitut	Original	Substitut
 Power	 Power	 0	 0
 Sleep	 Sleep / Timer	 Back	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Left	 Left
 Audio/Lang	 Audio / Lang I/II	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Vol-	 Vol-
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 Vol+	 Vol+
 7	 7	 Setup	 Setup / OPT /
 8	 8	 Play/Timeshift	 Play / Slow
 9	 9	 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear	 Stop	 Stop / Hold
 CH.List	 Smart / List	 Eject	 Eject / Surround

Original	Substitut	Original	Substitut
 Power	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 Play	 Pause	 Stop	
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE		
 MENU	 OK	 INFO	
 CLEAR		 RETURN	
 EXIT		 BACK	
 CANCEL	 LIST	 CH PAGE	
 VOL+	 SMART	 MEDIA	
 VOL-	 DISPLAY		
 TV	 DVD	 CD - STB	
 1	 TAPE	 TUNER	
 4	 Mandis	 Mandis	
 5	 USB	 BLUETOOTH	
 7	 HDMI - BAT	 PC	
 GUIDE EPG	 0	 FAV MARKER	
 NETFLIX	 APP	 YouTube	 Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
 www.mandis.tv			





Original	Substitut	Original	Substitut
 REC	Rec	 REC MODE	Rec / Rec Mode
 TEXT	Text	 GOTO TEXT	Text / Goto
 TEXT	<<	 TUNE-	<< / Tune-
 REVEAL	>>/Reveal	 TUNE+	>> / Tune+
 HOLD	I<</Hold	 PRESET-	I<< / Preset-
 SUB.P	>>I/Sub.P	 PRESET+	>>I / Preset+
 SUB.T	SUB.T	 EQ	Subtitle / EQ
 INDEX	Index/Title	 SHIFT + SOUND	Shift + Sound / Title
 SIZE	Size/Zoom	 ZOOM	Zoom / Size
 D.MENU	D.Menu	 TOP MENU	D.Menu / Top
 EPG	EPG	 GUIDE EPG	Guide / EPG / -/--
 FAV	FAV/Prog	 PC FAV MARKER	Fav / Marker / PC
 P.MODE	P.Mode/Lang	 FORMAT	Picture / Format
 S.MODE	S.Mode/Search	 TITLE	Sound / Title
 INFO	Info/Display	 ANGLE	Info / Angle
 ANGLE	Red/Angle	 NETFLIX	Red / Netflix / Search
 SLOW	Green/Slow	 APP	Green / APP / Repeat

Original	Substitut	Original	Substitut
 A-B	Yellow/A-B	 YouTube	Yellow / YouTube / Repeat
 REPEAT	Blue/Repeat	 Prime Video	Blue / Prime Video / Random

