














 























Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





**Power** **DIMMER MUTE** **SHIFT**

**TV** **DVD** **SAT** **AUX**  
 SLOW STEP-FREEZE HOLD REC MODE

**Play** **Pause** **Stop** **Record**  
 TUNE- TUNE+ PRESET- PRESET+

**Left Arrow** **Right Arrow** **Double Left Arrow** **Double Right Arrow**  
 TITLE LANG VIII EQ SURROUND

**SOUND** **AUDIO** **SUBTITLE** **Program Up**  
 FORMAT SIZE TIMER PROGRAM

**Picture** **ZOOM** **SLEEP** **TV RADIO**  
 TOP MENU OPT-TOOLS GOTO RDS

**D.MENU** **SETUP** **TEXT** **AV INPUT**

**HOME** **ANGLE**  
**MENU** **INFO**

**OK** (with directional arrows: Up, Down, Left, Right)

**CLEAR** **RETURN**  
**EXIT** **BACK**

**CANCEL** **LIST** **CH PAGE**  
**+** **SMART** **+**  
**VOL** **MEDIA** **CH PAGE**  
**-** **DISPLAY** **-**

**TV** **DVD** **CD-STD**  
**1** **2** **3**  
**VIDEO** **TAPE** **TUNER**  
**4** **5** **6**

**AUX-HDD** **USB** **BLUETOOTH**  
**7** **8** **9**

**Left Arrow** **HDMI-BAT** **PC**  
**GUIDE** **0** **FAV MARKER**  
**EPG**


**NETFLIX** **APP** **YouTube** **Prime Video**



 




 














 











**SEARCH** **REPEAT** **REPEAT A-B** **RANDOM**

**Mandis**  
 shop  
 www.mandis.tv





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





**POWER** **DIMMER MUTE** **SHIFT**  
**TV** **DVD** **SAT** **AUX**  
 SLOW STEP-FREEZE HOLD REC MODE  
 TUNE- TUNE+ PRESET- PRESET+  
 TITLE LANG VIII EQ SURROUND  
 SOUND AUDIO SUBTITLE  
 FORMAT SIZE TIMER PROGRAM  
 PICTURE ZOOM SLEEP TV RADIO  
 TOP MENU OPT-TOOLS GOTO RDS  
 D.MENU SETUP TEXT AV INPUT  
 HOME ANGLE  
 MENU INFO  
 CLEAR RETURN  
 EXIT BACK  
 CANCEL  
 LIST  
 + VOL - SMART  
 MEDIA  
 CH PAGE  
 DISPLAY  
 TV DVD CD-STD  
 1 2 3  
 VIDEO TAPE TUNER  
 4 5 6  
 AUX-HDD USB BLUETOOTH  
 7 8 9  
 +/- HDMI-BAT PC  
 GUIDE 0 FAV MARKER  
 EPG  
 NETFLIX APP YouTube Prime Video  
 SEARCH REPEAT REPEAT A-B RANDOM  
**Mandis**  
 shop  
 www.mandis.tv