





| Original | | Substitut | | Original | | Substitut | |
|---|---------|---|-------------------------|---|----------|---|-----------------------|
|  | POWER |  | Power |  | 9 wxyz |  | 9 |
|  | ←○ |  | Shift + Smart / List |  | TV |  | TV/Radio / |
|  | **/0 |  | Shift + Display / Media |  | 0 |  | 0 |
|  | *²/♀ |  | Shift + Red / Netflix / |  | ↔ |  | Shift + Back / Return |
|  | SOURCE |  | AV / Input / RDS |  | TV GUIDE |  | Guide / EPG / -/- |
|  | PRESETS |  | Smart / List |  | [≡] |  | Text / Goto |
|  | ≡≡ |  | Setup / OPT / |  | MENU |  | Menu / Home |
|  | ♪/☺/▶ |  | Display / Media |  | Q.MENU |  | D.Menu / Top |
|  | SLEEP |  | Sleep / Timer |  | UP |  | Up |
|  | 1 . /@ |  | 1 |  | LEFT |  | Left |
|  | 2 abc |  | 2 |  | OK |  | OK |
|  | 3 def |  | 3 |  | RIGHT |  | Right |
|  | 4 ghi |  | 4 |  | DOWN |  | Down |
|  | 5 jkl |  | 5 |  | BACK |  | Back / Return |
|  | 6 mno |  | 6 |  | →◻← |  | Picture / Format |
|  | 7 pqrs |  | 7 |  | EXIT |  | Exit / Cancel / Clear |
|  | 8 tuv |  | 8 |  | *FAV |  | Fav / Marker / PC |





| Original | | Substitut | |
|---|--------|---|---------------------------|
|  | VOL+ |  | Vol+ |
|  | MUTE |  | Mute / Dimmer |
|  | P+ |  | CH+ / Page+ |
|  | VOL- |  | Vol- |
|  | INFO |  | Info / Angle |
|  | P- |  | CH- / Page- |
|  | REC |  | Rec / Rec Mode |
|  | PLAY |  | Play / Slow |
|  | PAUSE |  | Pause / Step / Freeze |
|  | STOP |  | Stop / Hold |
|  | LANG. |  | Audio / Lang I/II |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | [≡]... |  | Sound / Title |
|  | RED |  | Red / Netflix / Search |
|  | GREEN |  | Green / APP / Repeat |
|  | YELLOW |  | Yellow / YouTube / Repeat |

| Original | | Substitut | |
|---|------|---|-----------------------------|
|  | BLUE |  | Blue / Prime Video / Random |

