

























Original		Substitut		Original		Substitut	
	POWER		Power		9 wxyz		9
	←○		Shift + Smart / List		TV		TV/Radio /
	**/0		Shift + Display / Media		0		0
	*²/♀		Shift + Red / Netflix /		↔		Shift + Back / Return
	SOURCE		AV / Input / RDS		TV GUIDE		Guide / EPG / -/-
	PRESETS		Smart / List		[≡]		Text / Goto
	≡≡≡		Setup / OPT /		MENU		Menu / Home
	♪/😊/▶		Display / Media		Q.MENU		D.Menu / Top
	SLEEP		Sleep / Timer		UP		Up
	1 . / @		1		LEFT		Left
	2 abc		2		OK		OK
	3 def		3		RIGHT		Right
	4 ghi		4		DOWN		Down
	5 jkl		5		BACK		Back / Return
	6 mno		6		→◻←		Picture / Format
	7 pqrs		7		EXIT		Exit / Cancel / Clear
	8 tuv		8		*FAV		Fav / Marker / PC





Original	Substitut
VOL+	Vol+
MUTE	Mute / Dimmer
P+	CH+ / Page+
VOL-	Vol-
INFO	Info / Angle
P-	CH- / Page-
REC	Rec / Rec Mode
PLAY	Play / Slow
PAUSE	Pause / Step / Freeze
STOP	Stop / Hold
LANG.	Audio / Lang I/II
<<<	<<< / Tune-
>>>	>>> / Tune+
[≡]...	Sound / Title
RED	Red / Netflix / Search
GREEN	Green / APP / Repeat
YELLOW	Yellow / YouTube / Repeat

Original	Substitut
BLUE	Blue / Prime Video / Random

