











































 

















Original	Substitut	Original	Substitut
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 D.Menu / Top
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Rec / Rec Mode
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat

Original	Substitut	Original	Substitut
 CH+	 CH+ / Page+	 CH+ / Page+	 CH+ / Page+
 Vol-	 Vol-	 Vol-	 Vol-
 Source	 AV / Input / RDS	 AV / Input / RDS	 AV / Input / RDS
 CH-	 CH- / Page-	 CH- / Page-	 CH- / Page-
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 OK	 OK	 OK	 OK
 Right	 Right	 Right	 Right
 Exit	 Exit / Cancel / Clear	 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Down	 Down	 Down	 Down
 Menu	 Menu / Home	 Menu / Home	 Menu / Home
 Rec	 Rec / Rec Mode	 Rec / Rec Mode	 Rec / Rec Mode
 Timeshift	 D.Menu / Top	 D.Menu / Top	 D.Menu / Top
 Timer	 Shift + Sleep / Timer	 Shift + Sleep / Timer	 Shift + Sleep / Timer
 Rec.List	 Shift + Rec / Rec Mode	 Shift + Rec / Rec Mode	 Shift + Rec / Rec Mode
 Red	 Red / Netflix / Search	 Red / Netflix / Search	 Red / Netflix / Search
 Green	 Green / APP / Repeat	 Green / APP / Repeat	 Green / APP / Repeat





Original	Substitut
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 Shift + Picture / Format
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Reveal	 Setup / OPT /
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Text	 Text / Goto
 Size	 Zoom / Size
 Play	 Play / Slow
 Subpage	 Eject / Surround
 Pause	 Pause / Step / Freeze
 Hold	 Shift + Stop /
 Stop	 Stop / Hold

Original	Substitut
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

