




























 




 


Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Picture Mode		Picture / Format
	Sound Mode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV+		Shift + Up
	0		0
	FAV-		Shift + Down

Original	Substitut	Original	Substitut
	Exit		Exit / Cancel / Clear
	Up		Up
	FAV		Fav / Marker / PC
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	EPG		Guide / EPG / -/--
	Vol+		Vol+
	Audio		Audio / Lang I/II
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat



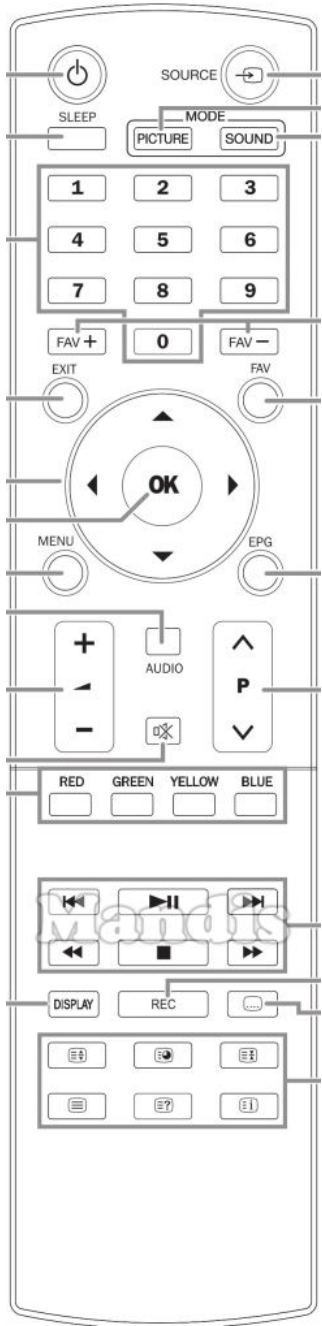

Original	Substitut
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Display	Display / Media
Rec	Rec / Rec Mode
[...]	Subtitle / EQ
[≡◆]	Zoom / Size
[≡○]	Eject / Surround
[≡+]	Shift + Stop /
[≡]	Text / Goto
[≡?]	Info / Angle

Original	Substitut
[≡i]	Smart / List

