







 







Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Info		Info / Angle
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+

Original	Substitut	Original	Substitut
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Wheel Up		>>I / Preset+
	Right		Right
	Wheel Down		I<< / Preset-
	Down		Down
	Guide		Guide / EPG / -/-
	3D		Shift + 3
	*/Settings		D.Menu / Top
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Substitut	Original	Substitut
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	Text  Text / Goto		
	T.Opt  Setup / OPT /		
	Subt.  Subtitle / EQ		

