



Original	Substitut
Power	Power
PRO/TV/TXT	TV/Radio /
Slow/Cancel	Shift + Play /
Rep/Reveal	Shift + Back / Return
TV/AV	AV / Input / RDS
<</Hold	<< / Tune-
>>/Size	>> / Tune+
<</Subpage	<< / Preset-
>> /Index	>> / Preset+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Substitut
9	9
FAV	Fav / Marker / PC
0	0
Recall	Back / Return
Vol+	Vol+
CH+	CH+ / Page+
Up	Up
Left	Left
OK	OK
Right	Right
Vol-	Vol-
Down	Down
CH-	CH- / Page-
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Nicam/A2	Text / Goto
Display	Display / Media





	Original	Substitut	Original	Substitut
	Mute			Mute / Dimmer
	Picture			Picture / Format
	Sound			Sound / Title
	Sleep			Sleep / Timer
	Subtitle			Subtitle / EQ
	LAN/EPG			Audio / Lang I/II
	Pause			Pause / Step / Freeze
	Play			Play / Slow
	Set/CH/List			Setup / OPT /
	D-Menu/List			D.Menu / Top
	Stop			Stop / Hold
	Record			Rec / Rec Mode
	Open/Close			Eject / Surround
	Red/Zoom			Red / Netflix / Search
	Green/Goto			Green / APP / Repeat
	Yellow/Title			Yellow / YouTube / Repeat
	Blue/Angle/Screen			Blue / Prime Video / Random

