







 



 

 

 

 

 

 

 


 





 

 

 

 

 

 

 





 

 



 


 
 



 





Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 PR+	 CH+ / Page+
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Tools	 Setup / OPT /
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Return	 Shift + Back / Return
 7	 7	 Smart HUB	 Smart / List
 8	 8	 Info	 Info / Angle
 9	 9	 OK	 OK
 0	 0	 Up	 Up
 TTX/MIX	 Text / Goto	 Down	 Down
 PRE_CH	 Back / Return	 Right	 Right
 Mute	 Mute / Dimmer	 Left	 Left
 CH List	 Shift + Smart / List	 Red/A	 Red / Netflix / Search
 Vol+	 Vol+	 Green/B	 Green / APP / Repeat

Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source	 AV / Input / RDS	 PR+	 CH+ / Page+
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Tools	 Setup / OPT /
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Return	 Shift + Back / Return
 7	 7	 Smart HUB	 Smart / List
 8	 8	 Info	 Info / Angle
 9	 9	 OK	 OK
 0	 0	 Up	 Up
 TTX/MIX	 Text / Goto	 Down	 Down
 PRE_CH	 Back / Return	 Right	 Right
 Mute	 Mute / Dimmer	 Left	 Left
 CH List	 Shift + Smart / List	 Red/A	 Red / Netflix / Search
 Vol+	 Vol+	 Green/B	 Green / APP / Repeat





Original	Substitut
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
ADJ/SUBT	Subtitle / EQ
P.Size	Zoom / Size
E-Manual	D.Menu / Top
Social TV	Shift + Green / APP /
Search	Shift + Red / Netflix /
Play	Play / Slow
3D	Display / Media
Stop	Stop / Hold
Pause	Pause / Step / Freeze
<</ <<	<< / Tune-
>>/>>	>> / Tune+
Rec	Rec / Rec Mode

Original	Substitut

