

 



 



 




 






 
 


Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Lang	 Audio / Lang I/II
 Source (Games)	 Eject / Surround
 Movie-Music-Phot	 Picture / Format
 [≡]..	 Zoom / Size
 */O	 Sleep / Timer
 TV	 TV/Radio /
 Q.Menu	 D.Menu / Top
 [-O-]	 Setup / OPT /
 [≡]/Text	 Text / Goto

Original	Substitut
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 BACK	 Back / Return
 Vol+	 Vol+
 World (Violet)	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 */Q	 Display / Media
 PR-	 CH- / Page-
 1./@	 1
 2abc	 2





Original	Substitut	Original	Substitut
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Guide	 Guide / EPG / -/--		
 0	 0		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Recall	 Shift + Back / Return		

