



| Original | Substitut | Original | Substitut |
|----------|------------------|----------|-----------------------|
| | Power | | Power |
| | Mute | | Mute / Dimmer |
| | Play | | Play / Slow |
| | Pause | | Pause / Step / Freeze |
| | Stop | | Stop / Hold |
| | Rec | | Rec / Rec Mode |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | Lang | | Audio / Lang I/II |
| | Source (Games) | | Eject / Surround |
| | Movie-Music-Phot | | Picture / Format |
| | [≡].. | | Zoom / Size |
| | * / O | | Sleep / Timer |
| | TV | | TV/Radio / |
| | Q.Menu | | D.Menu / Top |
| | [-O-] | | Setup / OPT / |
| | [≡]/Text | | Text / Goto |

| Original | Substitut | Original | Substitut |
|----------|----------------|----------|-----------------------|
| | Menu | | Menu / Home |
| | Up | | Up |
| | i | | Info / Angle |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Exit | | Exit / Cancel / Clear |
| | Down | | Down |
| | Back | | Back / Return |
| | Vol+ | | Vol+ |
| | World (Violet) | | Smart / List |
| | PR+ | | CH+ / Page+ |
| | Vol- | | Vol- |
| | * / Q | | Display / Media |
| | PR- | | CH- / Page- |
| | 1 | | 1 |
| | 2 | | 2 |





| Original | Substitut | Original | Substitut |
|----------|-----------|-----------------------------|-----------|
| 3 def | 3 | 3 | 3 |
| 4 ghi | 4 | 4 | 4 |
| 5 jkl | 5 | 5 | 5 |
| 6 mno | 6 | 6 | 6 |
| 7 pqrs | 7 | 7 | 7 |
| 8 tuv | 8 | 8 | 8 |
| 9 wxyz | 9 | 9 | 9 |
| Guide | Guide | Guide / EPG / -/-- | |
| 0 | 0 | 0 | 0 |
| Red | Red | Red / Netflix / Search | |
| Green | Green | Green / APP / Repeat | |
| Yellow | Yellow | Yellow / YouTube / Repeat | |
| Blue | Blue | Blue / Prime Video / Random | |
| Recall | Recall | Shift + Back / Return | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

