 

 



 





































 

















 










 

 
 

 
 


 
 




 

 





Original	Substitut	Original	Substitut
	Power		Power
	ATV/DTV		Smart / List
	Tv/DVD		Display / Media
	Eject		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	Mute		Mute / Dimmer
	Tv/Radio		TV/Radio /
	Input		AV / Input / RDS
	Digital Menu		D.Menu / Top
	DVD Menu		Menu / Home
	Top Menu		Shift + D.Menu / Top Menu
	Guide		Guide / EPG / -/-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter/CH List		OK
	Menu/Setup		Setup / OPT /
	Exit/Cancel		Exit / Cancel / Clear
	Return		Back / Return





Original	Substitut
 Play	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <</REV	 << / Tune-
 >>/FF	 >> / Tune+
 >>I	 >>I / Preset+
 Red/<I	 Red / Netflix / Search
 Green/Pause	 Green / APP / Repeat
 Yellow/Play Mode	 Yellow / YouTube / Repeat
 Blue/I>	 Blue / Prime Video / Random
 Marker	 Fav / Marker / PC
 Angle	 Shift + Info / Angle
 Repeat A-B	 Shift + Yellow / YouTube / Repeat A-B
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Audio Select	 Audio / Lang I/II
 Zoom/CH RTN	 Zoom / Size

Original	Substitut
 Jump	 Sound / Title
 PIC Size	 Picture / Format
 Sleep	 Sleep / Timer

