















 





















Original	Substitut
 Power	 Power
 Top Menu	 Shift + D.Menu / Top Menu
 DVD Menu	 D.Menu / Top
 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround
 [▼]	 Shift + Down
 O/I/II	 Display / Media
 Subtitle	 Subtitle / EQ
 Text/Angle	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Substitut
 9	 9
 AD	 Audio / Lang I/II
 0	 0
 ATV/DTV	 Shift + AV / Input / RDS
 Guide	 Guide / EPG / -/-
 Input	 AV / Input / RDS
 Menu	 Menu / Home
 Quick	 Shift + Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Jump	 Smart / List
 Return	 Back / Return
 Setup	 Setup / OPT /





Original	Substitut
	P+ CH+ / Page+
	[≡i]/[≡+] Info / Angle
	Vol+ Vol+
	P- CH- / Page-
	Mute Mute / Dimmer
	Vol- Vol-
	Pause Pause / Step / Freeze
	I<</[≡?] I<< / Preset-
	>>I/[O]/[≡x] >>I / Preset+
	<</[≡+] << / Tune-
	Play Play / Slow
	Stop Stop / Hold
	>>/[≡◇] >> / Tune+
	Red / Netflix / Search
	Green / Repeat
	Yellow / Root
	Blue / Title

Original	Substitut

