

 


 

 



 



 

 

 

 

 
 
 




 









 
 
 

 
 
 
 



 

 

 



 
 
 



 
 
 




Original	Substitut	Original	Substitut
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Mute		Mute
	Internet		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	i/Info		Info
	Music/Photo/Phot		Options
	Guide		Guide
	[≡]/Text		Text
	*/O		Format





Original	Substitut	Original	Substitut
*/Q	3D		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Lang	Dual		
[≡]..	Subt		
Rec	Rec		
[-o-]	Eject		
Play	Play		
Stop	Stop		
Pause	Pause		
<<	<<		
>>	>>		

