






 



 







 










































 






Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PR.List		Smart / List
	0		0
	Recall		Back / Return
	Vol+		Vol+
	Pic.Mode		Picture / Format
	S.Mode		Sound / Title

Original	Substitut	Original	Substitut
	CH+		CH+ / Page+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Zoom		Zoom / Size
	Sleep		Sleep / Timer
	Rec		Rec / Rec Mode
	Rec List		Shift + Rec / Rec Mode
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat

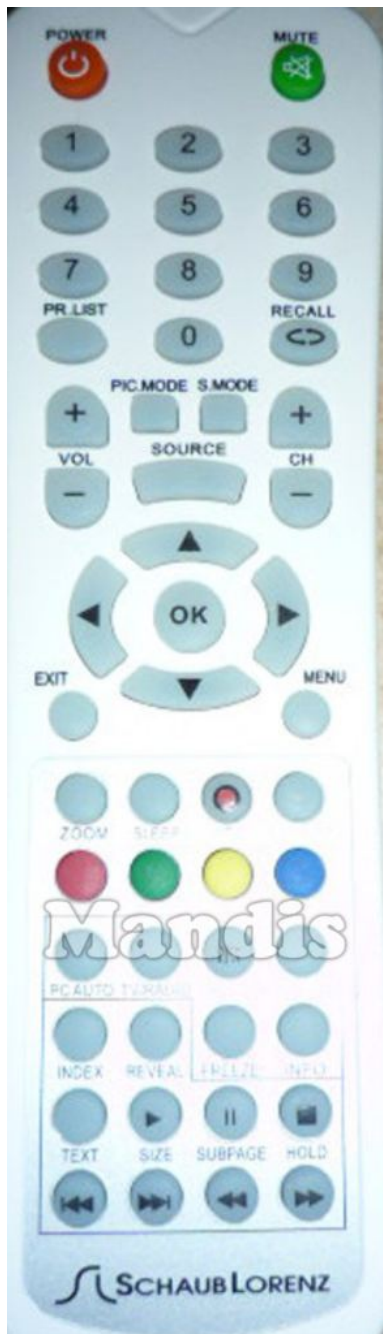



Original	Substitut	Original	Substitut
	Yellow  Yellow / YouTube / Repeat		Blue  Blue / Prime Video / Random
	PC Auto  Eject / Surround		Tv/Radio  TV/Radio /
	I/II/Audio  Audio / Lang I/II		Subtitle  Subtitle / EQ
	Index  Display / Media		Reveal  Shift + Back / Return
	Freeze  Shift + Pause / Step /		Info  Info / Angle
	Text  Text / Goto		Play/Size  Play / Slow
	Pause/Subpage  Pause / Step / Freeze		Stop/Hold  Stop / Hold
	I<<  I<< / Preset-		>>I  >>I / Preset+
	<<  << / Tune-		

Original	Substitut	Original	Substitut
	>>  >> / Tune+		

