 



 









 

 

 







 


 

 

 



 
 
















 

 



 
 


 



 

 







 



 


 
 


 


 
 






Original	Substitut	Original	Substitut
 Power	 Power	 Mute	 Mute / Dimmer
 Tv/DTV	 TV/Radio /	 Vol-	 Vol-
 Source	 AV / Input / RDS	 PR-	 CH- / Page-
 1	 1	 Guide	 Guide / EPG / -/--
 2	 2	 Menu	 Menu / Home
 3	 3	 CH.List	 Smart / List
 4	 4	 Tools	 Setup / OPT /
 5	 5	 Up	 Up
 6	 6	 Return	 Shift + Back / Return
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 -/--	 Shift + Guide / EPG / -/--	 Info	 Info / Angle
 0	 0	 Down	 Down
 Pre-CH	 Back / Return	 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 PR+	 CH+ / Page+	 Green	 Green / APP / Repeat

Original	Substitut	Original	Substitut
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 PR-	 CH- / Page-	 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home	 CH.List	 Smart / List
 Tools	 Setup / OPT /	 Up	 Up
 Return	 Shift + Back / Return	 Left	 Left
 Enter	 OK	 Right	 Right
 Info	 Info / Angle	 Down	 Down
 Exit	 Exit / Cancel / Clear	 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat		



