







 

























 

 

 

 































| Original | Substitut | Original | Substitut |
|---|----------------|---|------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Eject/Tv Audio |  | Eject / Surround |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | Recall/Goto |  | Shift + Text / |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Tv Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |

| Original | Substitut | Original | Substitut |
|---|---------------|---|--------------------------|
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | DVD Menu |  | D.Menu / Top |
|  | Exit |  | Exit / Cancel / Clear |
|  | Vol+ |  | Vol+ |
|  | Sound |  | Sound / Title |
|  | CH- |  | CH- / Page- |
|  | Vol- |  | Vol- |
|  | Pic |  | Picture / Format |
|  | CH+ |  | CH+ / Page+ |
|  | Sleep |  | Sleep / Timer |
|  | Aspect |  | Shift + Picture / Format |
|  | DVD Setup |  | Setup / OPT / |
|  | Back/Tv/Radio |  | Shift + Back / Return |
|  | Text |  | Text / Goto |





| Original | Substitut |
|-------------|-----------------------------|
| EPG | Guide / EPG / -/-- |
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| Stop | Stop / Hold |
| FAV | Fav / Marker / PC |
| Info | Info / Angle |
| Red/DVD/USB | Red / Netflix / Search |
| Green/Title | Green / APP / Repeat |
| Yellow/PBC | Yellow / YouTube / Repeat |
| Blue/Angle | Blue / Prime Video / Random |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Return | Back / Return |
| Display | Display / Media |
| DVD Audio | Audio / Lang I/II |

| Original | Substitut |
|----------|-------------------------------|
| Subtitle | Subtitle / EQ |
| Reveal | Shift + Exit / Cancel / Clear |
| Hold | Shift + Stop / |
| List | Smart / List |
| Index | TV/Radio / |
| Subpage | Shift + Smart / List |
| Size | Zoom / Size |
| Mix | Shift + Display / Media |
| Freeze | Shift + Pause / Step / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

