


 

 

 
 
 


 




 



 

 

 


 
 








Original	Substitut	Original	Substitut
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Last View		Pre Ch
	Radio/Tv		TV/R
	Internet		Smart
	CH/Page+		Ch +
	Skype		List
	CH/Page-		Ch -

Original	Substitut	Original	Substitut
	Guide		Guide
	Exit		Exit
	Return		Back
	Option		Options
	i/Status		Info
	Pause/Pause Tv		Pause
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Play/x1.3		Play
	Stop		Stop
	Function Menu		Menu
	Direct Navigator/PopUp		Shift + Menu
	OK		Ok
	Up		Up
	Down		Down





Original	Substitut
Right/II>	Right
<II/Left	Left
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
Audio	Dual
Text	Text
STTL	Subt
Prog/Check	Shift + Smart
Setup	Sleep
Display	Shift + Info
Chapter	Shift + Pre Ch
Time Slip	D. Menu
Del	Format
Manual Skip -10s	Shift + Format

Original	Substitut
Manual Skip +60s	3D
AV Input Tv	AV
Power Tv	Shift + Power
CH+ Tv	Shift + Ch +
CH- Tv	Shift + Ch -
Vol+ Tv	Vol +
Vol- Tv	Vol -
Drive Select	Media

