



Original	Substitut	Original	Substitut
	Power		Power
	Eject		Eject / Surround
	Subtitle		Subtitle / EQ
	1		1
	2		2
	3		3
	Angle		Info / Angle
	4		4
	5		5
	6		6
	Audio		Audio / Lang I/II
	7		7
	8		8
	9		9
	Osd		Display / Media
	Time		Sleep / Timer
	10+		Guide / EPG / -/-

Original	Substitut	Original	Substitut
	0		0
	PS/IS		Smart / List
	Title		Sound / Title
	Prog		TV/Radio /
	Clear		Exit / Cancel / Clear
	Setup		Setup / OPT /
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Return		Back / Return
	Menu		Menu / Home
	Pbc		Picture / Format
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	Play		Play / Slow





Original	Substitut
>>I	>>I / Preset+
>>	>> / Tune+
Stop	Stop / Hold
I<<	I<< / Preset-
Zoom	Zoom / Size
Step	Shift + Pause / Step /
Slow	Shift + Play /
Vol+	Vol+
Mute	Mute / Dimmer
3D	Shift + 3
Ran	D.Menu / Top
Vol-	Vol-
N/P	Red / Netflix / Search
R/L	Blue / Prime Video / Random
A/B	Yellow / YouTube / Repeat
Repeat	Green / APP / Repeat

Original	Substitut

