



Original	Substitut	Original	Substitut
Power	Power	CH-	CH- / Page-
DTV/VCR	AV / Input / RDS	Down	Down
Mute	Mute / Dimmer	Favorite	Fav / Marker / PC
Info	Info / Angle	1	1
Play	Play / Slow	2	2
Pause	Pause / Step / Freeze	3	3
Menu	Menu / Home	Game	Display / Media
EPG	Guide / EPG / -/--	4	4
Exit	Exit / Cancel / Clear	5	5
Up	Up	6	6
CH+	CH+ / Page+	Recall	Back / Return
Left	Left	7	7
Vol-	Vol-	8	8
OK	OK	9	9
Right	Right	0	0
Vol+	Vol+	Tv/Radio	TV/Radio /
Rec List	Smart / List	Audio	Audio / Lang I/II

Original	Substitut	Original	Substitut
CH-	CH- / Page-	CH	CH
Down	Down	TV	TV
Favorite	Fav / Marker / PC	DVD	DVD
1	1	CD-STB	CD-STB
2	2	Media	Media
3	3	VIDEO	VIDEO
4	4	TAPE	TAPE
5	5	TUNER	TUNER
6	6	Back / Return	Back / Return
7	7	AUX-HDD	AUX-HDD
8	8	USB	USB
9	9	HDMI-BAT	HDMI-BAT
0	0	FAV MARKER	FAV MARKER
Tv/Radio	TV/Radio /	NETFLIX	NETFLIX
Audio	Audio / Lang I/II	APP	APP





Original	Substitut
Subtitle	Subtitle / EQ
Text	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Record	Rec / Rec Mode
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+

Original	Substitut

