 
 



 




 


 



 








 




 

 
 



 














Original	Substitut	Original	Substitut
	Input		AV / Input / RDS
	Sync Menu		D.Menu / Top
	Power		Power
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Digital/Analog		Display / Media
	[+]		Zoom / Size
	Scene		Smart / List
	Audio		Audio / Lang I/II
	Guide		Guide / EPG / -/--
	[i+]/[?]		Info / Angle
	Up		Up

Original	Substitut	Original	Substitut
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6



