

 

 

 
 
 
 


 
 


 
 
 

 
 


 



 

 
 
 



 




 


 




 
 
 

 

 



 



 


 




Original	Substitut	Original	Substitut
 POWER	 Power	 RETURN	 Back
 INFO	 Info	 MENU	 Menu
 HDMI CONTROL	 Media	 ZOOM/RED/▲	 Red
 SLEEP	 Sleep	 REPEAT/GREEN/▼	 Green
 SCREEN	 Format	 ROOT/YELLOW	 Shift + Yellow
 SOURCE	 AV	 TITLE/BLUE	 Blue
 PRESETS	 Options	 OK/SELECT	 Ok
 1	 1	 UP	 Up
 2	 2	 DOWN	 Down
 3	 3	 RIGHT	 Right
 4	 4	 LEFT	 Left
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 V+	 Vol +
 8	 8	 V-	 Vol -
 9	 9	 FAV	 Pre Ch
 0	 0	 LANG	 Dual

Original	Substitut	Original	Substitut
 RETURN	 Back	 RETURN	 Menu
 MENU	 Menu	 ZOOM/RED/▲	 Red
 ZOOM/RED/▲	 Red	 REPEAT/GREEN/▼	 Green
 REPEAT/GREEN/▼	 Green	 ROOT/YELLOW	 Shift + Yellow
 ROOT/YELLOW	 Shift + Yellow	 TITLE/BLUE	 Blue
 TITLE/BLUE	 Blue	 OK/SELECT	 Ok
 OK/SELECT	 Ok	 UP	 Up
 UP	 Up	 DOWN	 Down
 DOWN	 Down	 RIGHT	 Right
 RIGHT	 Right	 LEFT	 Left
 LEFT	 Left	 P+	 Ch +
P+	Ch +	P-	Ch -
P-	Ch -	V+	Vol +
V+	Vol +	V-	Vol -
V-	Vol -	FAV	Pre Ch
FAV	Pre Ch	LANG	Dual
LANG	Dual		





Original		Substitut		Original		Substitut	
	SUBTITLE		Subt		>>		>>
	MUTE		Mute				
	SWAP/↔		Exit				
	EPG		Guide				
	-/--		Shift + Guide				
	TEXT		Text				
	C		Yellow				
	DISPLAY		Shift + Info				
	ANGLE		3D				
	SEARCH MODE		TV/R				
	REC		Rec				
	STOP		Stop				
	PLAY		Play				
	PAUSE		Pause				
	<<		<<				
	>>		>>				
	<<		<<				

