









 


 














 


 









 






 






	Original	Substitut		Original	Substitut
	Standby/On		Power		I<<
	1		1		>>I
	2		2		Play
	3		3		Stop
	4		4		<<
	5		5		>>
	6		6		Mute
	7		7		Prog+
	8		8		Prog-
	9		9		Vol+
	0		0		Vol-
	Tv/DVD		TV/R		Menu
	Open/Close		Eject		Return
	DTV/Analog		Smart		Exit
	Input Sel		AV		Title List/Disc Menu
	Copy		Options		Play List/Title Menu
	Pause		Pause		Red






















 

 

 


 





 

 

Original	Substitut
Green	Green
Yellow	Yellow
Blue	Blue
Guide	Guide
Info	Info
Subtitle	Subt
Text	Text
Tv/Radio	Sleep
FAV List	Pre Ch
Marker	Shift + Options
Rec	Rec
Audio	Dual
Rec Mode	Shift + Rec
Rec	Format
Repeat	Shift + Text
OK	Ok
Up	Up

Original	Substitut
Down	Down
Right	Right
Left	Left
USB	Shift + Media
Timer	Shift + AV
HDD	Shift + Smart













 


 














 


 









 






 


 

 






	Original	Substitut		Original	Substitut
	Input Sel		AV		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Prog+		Ch +		
	Prog-		Ch -		
	Standby/On TV		Power		
	Mute Tv		Mute		
	Tv Vol+		Vol +		
	Tv Vol-		Vol -		



 







 
 

	Original	Substitut		Original	Substitut
	Standby/On		Power		I<<
	1		1		>>I
	2		2		Play
	3		3		Stop
	4		4		<<
	5		5		>>
	6		6		Prog+
	7		7		Prog-
	8		8		Menu
	9		9		Return
	0		0		Exit
	Tv/DVD		TV/R		Title List/Disc Menu
	Open/Close		Eject		Play List/Title Menu
	DTV/Analog		Smart		Red
	Input Sel		AV		Green
	Copy		Options		Yellow
	Pause		Pause		Blue
					Red
					Green
					Yellow
					Blue
					Shift + Menu







Original	Substitut	Original	Substitut
 Guide	 Guide		
 Info	 Info		
 Subtitle	 Subt		
 Text	 Text		
 Tv/Radio	 D. Menu		
 FAV List	 Pre Ch		
 Marker	 Shift + Options		
 Rec	 Rec		
 Audio	 Dual		
 Rec Mode	 Shift + Rec		
 Rec	 Format		
 Repeat	 Shift + Text		
 OK	 Ok		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		

Original	Substitut	Original	Substitut
 USB	 Shift + Media		
 Timer	 Shift + AV		
 HDD	 Shift + Smart		

