 
 




Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 1	 1	 OK	 OK
 2	 2	 Right	 Right
 3	 3	 I<<	 I<< / Preset-
 4	 4	 Down	 Down
 5	 5	 >>I	 >>I / Preset+
 6	 6	 Stop	 Stop / Hold
 7	 7	 Play	 Play / Slow
 8	 8	 Pause	 Pause / Step / Freeze
 9	 9	 Subtitle	 Subtitle / EQ
 Title/Return	 Back / Return	 Angle	 Info / Angle
 Title/Return	 Sound / Title	 Zoom	 Zoom / Size
 0	 0	 Audio	 Audio / Lang I/II
 Display	 Display / Media	 Repeat	 Green / APP / Repeat
 Disc Menu	 D.Menu / Top	 Repeat A-B	 Yellow / YouTube / Repeat
 Up	 Up	 Preview	 Smart / List
 System Menu	 Menu / Home	 Mute	 Mute / Dimmer

Original	Substitut	Original	Substitut
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 PICTURE	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 EXIT	 CANCEL	 LIST
 VOL +	 SMART	 MEDIA	 CH PAGE +
 VOL -	 DISPLAY	 TV	 DVD
 1	 TAPE	 CD - STB	 VIDEO
 2	 TUNER	 AUX - HDD	 USB
 3	 BLUETOOTH	 7	 8
 4	 5	 6	 9
 GUIDE EPG	 HDMI - SAT	 PC	 FAV MARKER
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM

