 


 


 

 


 
 





 
 

 
 







 








 
 




 

 
 
 


 




 
 
 


 


 





 
 
 
 
Original	Substitut
 Standby	 Power
 Mute	 Mute
 Source	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Audio I/II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Substitut
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Menu	 Menu
 Exit	 Exit
 Text	 Text
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green





Original	Substitut	Original	Substitut
	Yellow		Yellow
	Blue		Blue
	Subtitle		Subt
	Size		Format
	Reveal		Back
	Mix		Smart
	Index		List
	EPG		Guide
	Media		Media
	Timeshift		Options
	Tv/Radio		TV/R
	Play		Play
	Pause/Hold		Pause
	Rec		Rec
	Stop/FAV		Stop
	I<</Cancel		I<<
	>>I/Subpage		>>I

Original	Substitut	Original	Substitut
	<</FAV-		<<
	>>/FAV+		>>

