 







 



 



 
 


 



 
 
 
 

 






 
 


 
 

 



 
 

 





 
 












Original	Substitut	Original	Substitut
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Red	 Red
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 Green	 Green
 9	 9	 EPG	 Guide
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 TTX	 Text
 Exit	 Exit	 Audio	 Dual
 Up	 Up	 i	 Info
 Down	 Down	 FAV	 Pre Ch
 Right	 Right	 Tv/Radio	 TV/R

Original	Substitut	Original	Substitut
 MUTE	 SHIFT	 TV	 AUX
 TV	 DVD	 SAT	 REC MODE
 PLAY MODE	 II	 SOUND	 AD
 <<<	 >>>	 DISC NAV	 SETTINGS
 LIST	 DUAL	 PROG	 OPT
 SLEEP	 TV/R	 E-MANUAL	 ECO
 D.MENU	 TEXT	 REPEAT	 3D
 TOP MENU	 DISPLAY	 MENU	 INFO
 CLEAR	 OK	 EXIT	 RETURN
VOL +	HOME	+	BACK
-	SMART	CH +	-
1	APP	2	MEDIA
3	4	5	6
6	7	8	8
7	9	9	9
8	0	0	0
9	FAV	PRE-CH	PRE-CH
0	GUIDE	A	B
GUIDE	C	D	D
A	MANDIS SHOP	WWW.MANDIS.TV	WWW.MANDIS.TV



