



 


 












 

 
 

 

 
 




 

Original	Substitut	Original	Substitut
	Source		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	PRE-CH		Back / Return
	HDMI		Shift + 0
	YPbPr		Setup / OPT /
	Video		Shift + 4

Original	Substitut	Original	Substitut
	PC		Shift + Fav / Marker / PC
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Zoom		Zoom / Size
	CH-		CH- / Page-
	Dual		Audio / Lang I/II
	ADJ Audio		Sound / Title
	ADJ Video		Picture / Format
	Sleep		Sleep / Timer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu/Exit		Menu / Home
	Menu/Exit		Exit / Cancel / Clear





Original	Substitut
 Down	 Down
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Teletext	 Text / Goto
 Mix	 Shift + Text /
 Size	 Shift + Zoom /
 Subpage	 >> / Tune+
 Index	 Play / Slow
 Subtitle	 Subtitle / EQ
 Hold	 Stop / Hold
 Reveal	 << / Tune-
 FAV	 Fav / Marker / PC
 CH-List	 Smart / List
 AD	 Shift + Audio / Lang I/II

Original	Substitut
 Freeze	 Pause / Step / Freeze

