




















Original	Substitut
	Mute
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	APP
	APP
	0
	Back
	L-
	L+

Substitut	Original
Mute / Dimmer	
Power	
1	
2	
3	
4	
5	
6	
7	
8	
9	
Shift + Green / APP /	
Display / Media	
0	
Back / Return	
I<< / Preset-	
>>I / Preset+	

Original	Substitut
	Menu
	Up
	Exit
	Left
	OK
	Right
	CH+ / Page+
	Down
	Vol+
	CH- / Page-
	Vol-
	Info
	List
	EPG
	Red
	Green
	Yellow

Substitut	Original
Menu / Home	
Up	
Exit / Cancel / Clear	
Left	
OK	
Right	
CH+ / Page+	
Down	
Vol+	
CH- / Page-	
Vol-	
Info / Angle	
Smart / List	
Guide / EPG / -/-	
Red / Netflix / Search	
Green / APP / Repeat	
Yellow / YouTube / Repeat	





Original	Substitut	Original	Substitut
	Blue		Blue / Prime Video / Random
	Audio		Audio / Lang I/II
	Subt		Subtitle / EQ
	Text		Text / Goto
	Tv/Rad.		TV/Radio /
	OPT		Setup / OPT /
	Still		Pause / Step / Freeze
	Tv/AV		AV / Input / RDS

Original	Substitut

