



| Original | | Substitut | | Original | | Substitut | |
|---|--------------|---|---------------|---|---------------|---|----------------|
|  | Power |  | Power |  | 8 |  | 8 |
|  | Open / Close |  | Eject |  | 9 |  | 9 |
|  | TV / DTV |  | TV/R |  | -/-- |  | Shift + Guide |
|  | Line |  | AV |  | 0 |  | 0 |
|  | DVD |  | Media |  | PRE |  | Pre Ch |
|  | TTX |  | Text |  | Vol + |  | Vol + |
|  | PIP ON / OFF |  | Shift + Power |  | Vol - |  | Vol - |
|  | PIP Swap |  | Shift + Back |  | Prog + |  | Ch + |
|  | PIP Source |  | Shift + AV |  | Prog - |  | Ch - |
|  | PIP Sound |  | Shift + Dual |  | M/S |  | Subt |
|  | 1 |  | 1 |  | Still |  | Shift + Pause |
|  | 2 |  | 2 |  | Sleep |  | Sleep |
|  | 3 |  | 3 |  | TV Menu |  | Menu |
|  | 4 |  | 4 |  | P.STD |  | Format |
|  | 5 |  | 5 |  | S.STD |  | Shift + Subt |
|  | 6 |  | 6 |  | P.Size |  | Shift + Format |
|  | 7 |  | 7 |  | Exit / Cancel |  | Exit |





| Original | Substitut | Original | Substitut |
|----------|---------------|----------|-------------------------|
| | Up | | Blue |
| | Right | | Blue |
| | Down | | SHIFT + REPEAT Text |
| | Left | | SHIFT + SEARCH TV/R |
| | Enter | | Dual |
| | Mute | | 3D |
| | Display | | Back |
| | Stop | | SHIFT + TOP MENU Menu |
| | Play | | List |
| | Pause | | Options |
| | << | | Guide |
| | >> | | SHIFT + CLEAR EXIT Exit |
| | I<< | | Info |
| | >>I | | |
| | Red / Setup | | |
| | Green / Title | | |
| | Yellow / Menu | | |

