



Original	Substitut	Original	Substitut
	Power		Power
	Guide		Guide / EPG / -/--
	Input TV		TV/Radio /
	Input AV		AV / Input / RDS
	Menu		Menu / Home
	Text		Text / Goto
	[≡♦]/STTL		Subtitle / EQ
	[+]/Aspect		Picture / Format
	i		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	APPS		Shift + Green / APP /
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK

Original	Substitut	Original	Substitut
	Home		Shift + Menu /
	Option		Setup / OPT /
	Back/Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Original		Substitut	
6mno	6	TUNER 6	6
7pqrs	7	AUX - HDD 7	7
8tuv	8	USB 8	8
9wxyz	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
? / HELP	?/Help	LIST SMART	Smart / List
LAST VIEW	Last View	PC FAV MARKER	Fav / Marker / PC
Left Arrow	<<	TUNE-	<< / Tune-
Play	Play	SLOW	Play / Slow
Right Arrow	>>	TUNE+	>> / Tune+
Left Arrow + Stop	l<<	PRESET-	l<< / Preset-
Pause	Pause	STEP - FREEZE	Pause / Step / Freeze
Right Arrow + Stop	>>l	PRESET+	>>l / Preset+
Stop	Stop	HOLD	Stop / Hold
Red Dot	Rec	REC MODE	Rec / Rec Mode

Original	Substitut

