











 



 
 
 



 
 


 
 












 
 


 

 


 
 

 
 







 
 
 

 
 
 




Original	Substitut	Original	Substitut
 Power	 Power	 Info/[≡i]	 Info
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Menu	 Menu
 5	 5	 Exit	 Exit
 6	 6	 Recall	 Pre Ch
 7	 7	 Home	 Shift + Smart
 8	 8	 ≡	 Shift + Media
 9	 9	 Internet	 Media
 0	 0	 Up	 Up
 Back	 Back	 Down	 Down
 Audio	 Dual	 Right	 Right
 Source	 AV	 Left	 Left
 List	 List	 OK	 Ok
 EPG	 Guide	 Radio/Audio+	 TV/R





Original		Substitut	
	Smart Tv		Smart
	On/Off Mouse		Eject
	Timeshift/Audio-	+	Shift + TV/R
	Sleep/Zoom+		Sleep
	FAV/Zoom-		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	<<		<<
	>>		>>
	I<		I<<
	>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec

Original		Substitut	
	[≡]		Text
	[≡+]	+	Shift + Subt
	[≡?]		Options
	[≡◆]/[+]		Format
	[≡x]		3D
	[≡o]/Subtitle		Subt
	Index	+	Shift + Info

