




Original	Substitut
 Power	 Power
 Open/Close	 Eject / Surround
 DVD	 Shift + 2
 VCR	 Shift + 4
 Display	 Display / Media
 Up	 Up
 Disc Menu	 D.Menu / Top
 Left	 Left
 Enter	 OK
 Right	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Title	 Sound / Title
 Pause / Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 I<<	 I<< / Preset-

Original	Substitut
 Play	 Play / Slow
 >>I	 >>I / Preset+
 1	 1
 2	 2
 3	 3
 Program	 TV/Radio /
 4	 4
 5	 5
 6	 6
 Clear	 Exit / Cancel / Clear
 7	 7
 8	 8
 9	 9
 0	 0
 O)) / Audio	 Audio / Lang I/II
 [...] / Subtitle	 Subtitle / EQ
 Marker	 Fav / Marker / PC



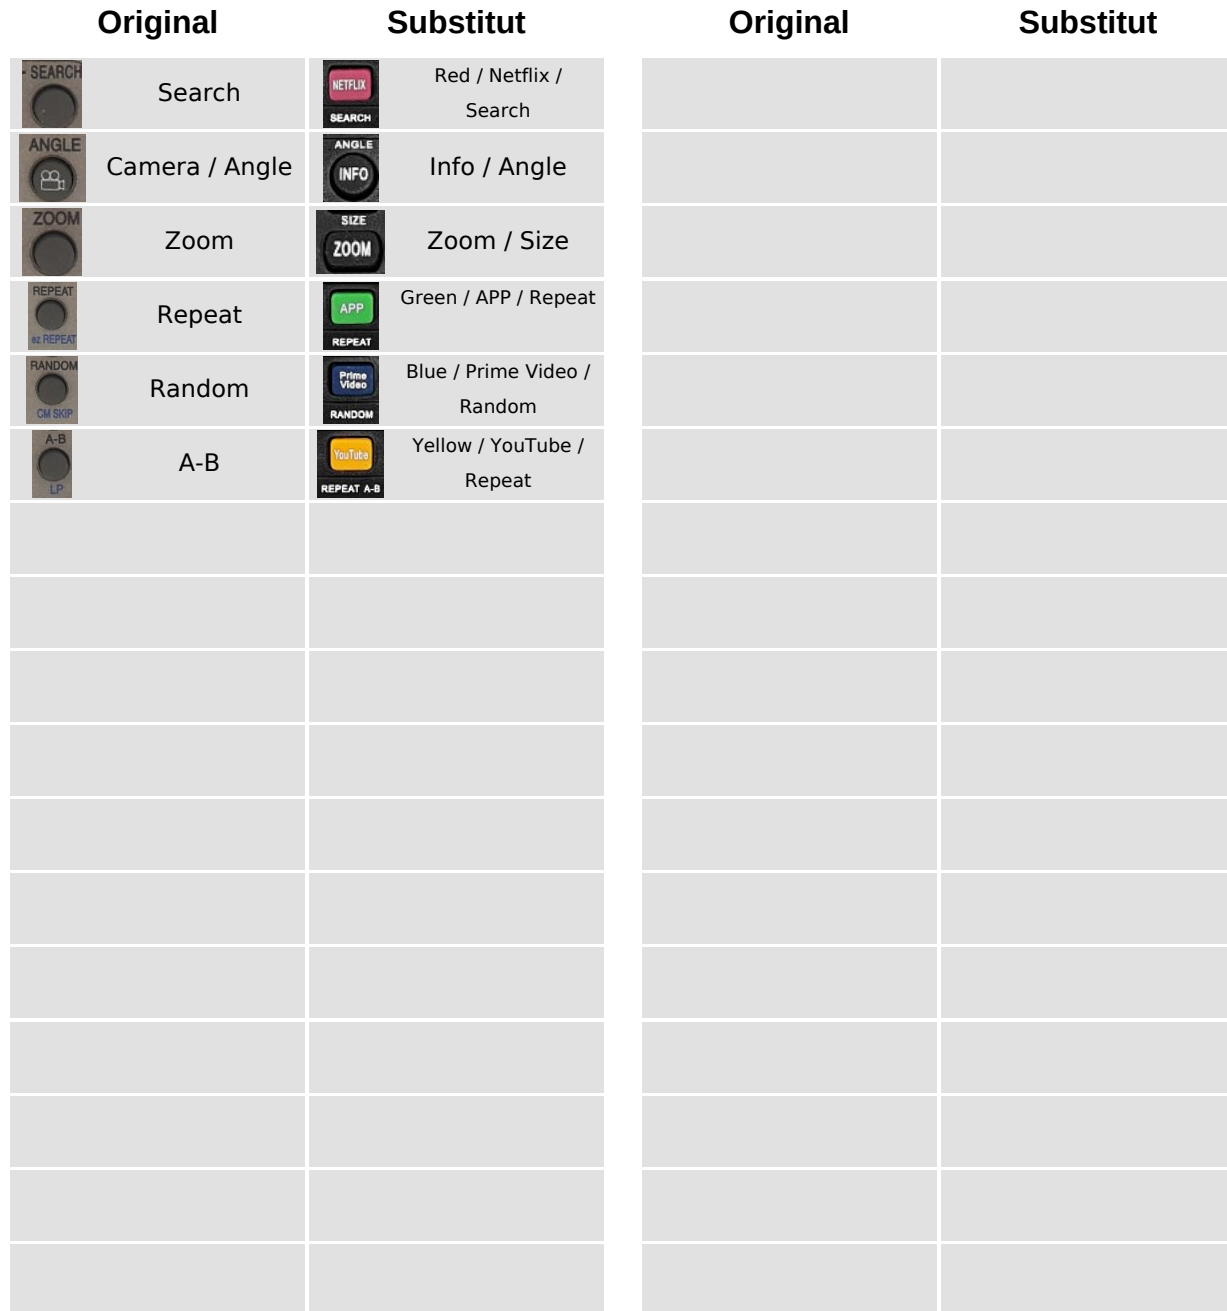



Original	Substitut	Original	Substitut
	Power		Power
	Eject		Eject / Surround
	TV / VCR		Smart / List
	DVD		Shift + 2
	VCR		Shift + 4
	AV		AV / Input / RDS
	CLK / CNT		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	[i]		Info / Angle
	Down		Down
	Pause / Step		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec / ITR		Rec / Rec Mode
	I <<		I << / Preset-

Original	Substitut	Original	Substitut
	Play		Play / Slow
	>>I		>>I / Preset+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	0		0
	O)) / Audio		Audio / Lang I/II
	Search		Red / Netflix / Search
	C.Lock		Text / Goto
	ez Repeat		Green / APP / Repeat



