




 
 

 
 
 
 



 




 











 





	Original	Substitut	Original	Substitut
	On/Standby	 Power		
	Source Power	 Shift + Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	Channel+	 Ch +		
	Channel-	 Ch -		

 





 






Original	Substitut	Original	Substitut
 On/Standby	 Power	 <</Channel-	 <<
 Play	 Play	 >>/Tuning+	 >>
 Stop	 Stop	 <</Tuning-	 <<
 Still/Pause	 Pause	 DVS/Stereo	 Dual
 Mute	 Mute	 Display	 Info
 Vol+	 + Vol +	 Subwoofer Level+	 Ch +
 Vol-	 Vol -	 Subwoofer Level-	 Ch -
 Push/Enter	 Ok	 Source Power	 Shift + Power
 Up	 Up	 DVD/CD	 Red
 Down	 Down	 FM/AM	 Green
 Right	 Right	 AUX	 Yellow
 Left	 Left	 iPod	 Blue
 Menu/Guide	 Guide	 Home	 Smart
 Top Menu	 Menu	 Net/USB	 Media
 Return	 Back	 1	 1
 Tool	 Options	 2	 2
 >> /Channel+	 >>	 3	 3














 


 
 

 

 

 




 


 







	Original	Substitut		Original	Substitut
	4		4		Audio RDS
	5		5		Shift + Dual
	6		6		Subtilte/PTY
	7		7		Angle/CT
	8		8		Zoom/RT
	9		9		Surround
	0		0		Surround
	+10		Pre Ch		D. Menu
	Clear		Exit		Rec
	HDMI		Shift + Media		
	Sleep		Sleep		
	Call		Shift + Pre Ch		
	Program		Shift + Sleep		
	Repeat		Text		
	Random		TV/R		
	Status		AV		
	Tone		List		





	Original	Substitut		Original	Substitut
	On/Standby		Power		
	Source Power	 + 	Shift + Power		
	Channel+		Ch +		
	Channel-		Ch -		
	Vol+		Vol +		
	Vol-		Vol -		
	Mute		Mute		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		



