 

 
 

 
 





 
 
 
 
 



 
 

 
 


 



 
 




 



 





 



 









 

 






 




Original	Substitut	Original	Substitut
 Power	 Power	 Radio/+10	 Guide
 Mute	 Mute	 Recall/Program	 Back
 Source	 AV	 Tv Menu	 Menu
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Goto/Text	 Text
 Audio/I/II	 Dual	 Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK/Enter	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/DVD Setup	 Red
 0	 0	 Green/A-B	 Green

Original	Substitut	Original	Substitut
 Radio/+10	 Guide	 TV	 DVD
 Recall/Program	 Back	 SAT	 AUX
 Tv Menu	 Menu		
 Exit	 Exit		
 Goto/Text	 Text		
 Display	 Info		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK/Enter	 Ok		
 Vol+	 Vol +		
 Vol-	 Vol -		
 P+	 Ch +		
 P-	 Ch -		
 Red/DVD Setup	 Red		
 Green/A-B	 Green		



