



| Original | Substitut | Original | Substitut |
|---|--|---|--|
|  Power |  Power |  Green/Slow |  Green |
|  I<< |  I<< |  Yellow/Repeat |  Yellow |
|  Eject |  Eject |  Blue/A-B |  Blue |
|  << |  << |  CH+ |  Ch + |
|  >> |  >> |  CH- |  Ch - |
|  >> |  >> |  Tv-Menu |  Menu |
|  Play |  Play |  TV/AV |  AV |
|  Pause |  Pause |  Vol+ |  Vol + |
|  Stop |  Stop |  Vol- |  Vol - |
|  TV/TXT/Langua |  Text |  DTV |  Shift + Smart |
|  Cancel/Zoom |  Shift + Eject |  DVD Setup |  D. Menu |
|  Reveal/Subtitle |  3D |  Exit |  Exit |
|  Hold/Menu |  Smart |  Display |  Shift + Info |
|  Size/Angle |  Format |  Up |  Up |
|  Subpage/Title |  Options |  Down |  Down |
|  Index/Goto |  Media |  Right |  Right |
|  Red/Program |  Red |  Left |  Left |





| Original | Substitut |
|----------|-------------------|
| OK | Ok |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| -/-- | + Shift + Guide |
| Recall | Back |
| Picture | + Shift + Format |
| Sound | + Shift + Dual |
| Nicam/A2 | Dual |
| Mute | Mute |

| Original | Substitut |
|--------------|-----------|
| Sleep | Sleep |
| Info | Info |
| Subtitle | Subt |
| Channel List | List |
| EPG | Guide |
| Tv/Radio | TV/R |
| FAV | Pre Ch |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

