



Original	Substitut
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Info / Angle
	0
	AV / Input / RDS
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat

Original	Substitut
	Blue / Prime Video / Random
	Setup / OPT /
	Up
	Menu / Home
	Left
	OK
	Right
	Text / Goto
	Down
	Back / Return
	CH+ / Page+
	Vol+
	CH- / Page-
	Vol-
	Smart / List
	<< / Tune-
	TV/Radio /




 
 


 









Original	Substitut	Original	Substitut
	Play		Play / Slow
	Guide/[◆]		Guide / EPG / -/-
	>>		>> / Tune+
	[^]/Timer		Display / Media
	Rec/Top Menu		D.Menu / Top
	Rec/Top Menu		Rec / Rec Mode
	I-II/[X]		Audio / Lang I/II
	Stop		Stop / Hold
	[...]/[≡i]		Subtitle / EQ
	Pause		Pause / Step / Freeze
	Zoom		Zoom / Size
	(↔)		Sound / Title





	Original	Substitut	Original	Substitut
	Power			
	Up			
	Menu			
	Left			
	OK			
	Right			
	Down			
	Back			
	↑			
	↓			
	<<			
	Play			
	>>			
	Rec/Top Menu			
	Rec/Top Menu			
	Stop			
	Pause			





Original	Substitut		
	Power		Power
	Up		Up
	Down		Down
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Original	Substitut

