
 





Original	Substitut
	
Power	Power
	
Preview	Fav / Marker / PC
	
Mute	Mute / Dimmer
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
Return/Title	Back / Return
	
0	0
	
Display	Display / Media
	
I<<	I<< / Preset-
	
>>I	>>I / Preset+

Original	Substitut
	
Play	Play / Slow
	
Stop	Stop / Hold
	
Pause	Pause / Step / Freeze
	
Up	Up
	
Left	Left
	
OK	OK
	
Right	Right
	
Disc Menu	D.Menu / Top
	
Down	Down
	
System Menu	Menu / Home
	
Subtitle	Subtitle / EQ
	
Angle	Info / Angle
	
Zoom	Zoom / Size
	
Repeat	Green / APP / Repeat
	
Repeat A-B	Yellow / YouTube / Repeat
	
Audio	Audio / Lang I/II

