









Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Nicam		Setup / OPT /

Original	Substitut	Original	Substitut
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	CH+		CH+ / Page+
	Vol+		Vol+
	Info		Info / Angle
	CH-		CH- / Page-
	Vol-		Vol-
	Media		Display / Media
	Freeze		Shift + Pause / Step /
	Aspect		Shift + Picture / Format
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original	Substitut	Original	Substitut
 Exit	 Exit / Cancel / Clear	 Green	 Green / APP / Repeat
 Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 Play	 Play / Slow	 Blue	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze		
 Stop/Hold	 Stop / Hold		
 <<	 << / Tune-		
 Size	 Zoom / Size		
 >>/Reveal	 >> / Tune+		
 I<</Index	 I<< / Preset-		
 >>I/Subpage	 >>I / Preset+		
 Lang	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Rec	 Rec / Rec Mode		
 R.List	 Smart / List		
 TV/Radio	 TV/Radio /		
 Timeshift	 D.Menu / Top		
 Red	 Red / Netflix / Search		

Original	Substitut	Original	Substitut
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

