




 



 




 



 





 






 
 




 






 






Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	CH List		Smart / List
	0		0
	Return/Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS

Original	Substitut	Original	Substitut
	Left		Left
	OK		OK
	Right		Right
	Home		D.Menu / Top
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix	 + 	Shift + Red / Netflix /
	Vol+		Vol+
	Info		Info / Angle
	PR+		CH+ / Page+
	Vol-		Vol-
	EPG		Guide / EPG / -/-
	PR-		CH- / Page-
	Rec		Rec / Rec Mode
	Nicam I/II		Audio / Lang I/II
	Text		Text / Goto
	AD/Subpage		Sound / Title





Original		Substitut		Original	Substitut
	FAV/Size		Fav / Marker / PC		
	FAV/Size		Zoom / Size		
	Quick/Hold		Display / Media		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Play		Play / Slow		
	Pause/Index		Pause / Step / Freeze		
	<</Reveal		<< / Tune-		
	>>/Mix		>> / Tune+		
	Stop/Cancel		Stop / Hold		

