 







Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Substitut
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Display	 Display / Media
 CH-	 CH- / Page-
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu / Home
 OK	 OK





Original	Substitut	Original	Substitut
 Exit	 Exit / Cancel / Clear	 Timeshift	 Smart / List
 Subtitle	 Subtitle / EQ	 Tv/Radio	 TV/Radio /
 Index	 Info / Angle		
 Size	 Zoom / Size		
 Reveal	 D.Menu / Top		
 Mix	 Setup / OPT /		
 Play	 Play / Slow		
 Pause/Hold	 Pause / Step / Freeze		
 I<</Cancel	 I<< / Preset-		
 >>I/Subpage	 >>I / Preset+		
 EPG	 Guide / EPG / -/-		
 FAV	 Fav / Marker / PC		
 Stop	 Stop / Hold		
 <</FAV-	 << / Tune-		
 >>/FAV+	 >> / Tune+		
 Media	 +  Shift + Display / Media		
 Rec	 Rec / Rec Mode		

Original	Substitut	Original	Substitut
