


 







 





 

 



 







 



 



 



 

 

 

 









 











 


 
 



 









 


 
















Original	Substitut	Original	Substitut
 Power	 Power	 Chapter Mark	 Shift + Media
 Open / Close	 Eject	 AV Select	 Shift + AV
 Timer Prog	 Sleep	 Mode	 Guide
 Input Select	 AV	 Time Slip	 Pre Ch
 1	 1	 Setup	 Options
 2	 2	 Audio	 Dual
 3	 3	 Clear	 Exit
 4	 4	 Disc Menu	 D. Menu
 5	 5	 Top Menu	 Menu
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 Prog. +	 Ch +	 Display	 Info
 Prog. -	 Ch -	 Return	 Back
 Satellite Link	 Media	 Skip I<<	 I<<





Original	Substitut	Original	Substitut
 Skip >>I	 >>I	 1.3x / 0.8x Play	 Shift + Play
 Variable Replay	 Smart	 Dubbing	 Subt
 Variable Skip	 Shift + Smart		
 << / Slow Rev	 <<		
 >> / Slow Fwd	 >>		
 Play	 Play		
 Play reverse / Adjust -	 Vol -		
 Play / Adjust +	 Vol +		
 Stop	 Stop		
 Pause	 Pause		
 VCR	 Yellow		
 HDD	 Blue		
 DVD	 Green		
 Rec Mode	 Shift + Rec		
 Rec	 Rec		
 Repeat	 Text		
 Search	 TV/R		

