



Original	Substitut	Original	Substitut
	Standby		Power
	1/VCR/DVR		1
	2/CBL/SAT		2
	3/Game/TV		3
	4/AUX		4
	5/Multi CH		5
	6/DVD		6
	7/Tape		7
	8/Tuner		8
	9/CD		9
	+10/10/-/-/D.Tun		Guide / EPG / -/-
	0/11/Dimmer		0
	CLR/12/Sleep/Ent		Fav / Marker / PC
	CH Disc		CH+ / Page+
	CH Disc Album-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-

Original	Substitut	Original	Substitut
	Up		Up
	Previous Menu/Muting		Menu / Home
	Left/Playlist/Cat		Left
	Enter		OK
	Right/Playlist/Cat		Right
	Setup		Setup / OPT /
	Down		Down
	Return		Back / Return
	Pause/<		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Stereo		Sound / Title
	Surround		Eject / Surround
	< Listening Mode		Shift + Left
	Listening Mode >		Shift + Right





Original	Substitut	Original	Substitut
 Test Tone/Audio	 Audio / Lang I/II		
 CH Sel/Subtitle	 Subtitle / EQ		
 Random Level-	 Blue / Prime Video / Random		
 Repeat Level+	 Green / APP / Repeat		
 Display	 Display / Media		
 L.Night/DVD	 Sleep / Timer		
 Cine FLTR/HDD	 TV/Radio /		





Original	Substitut	Original	Substitut
 Standby	 Power	 Enter	 OK
 1/VCR/DVR	 1	 Right/Playlist/Cat	 Right
 2/CBL/SAT	 2	 Setup	 Setup / OPT /
 3/Game/TV	 3	 Down	 Down
 4/AUX	 4	 Return	 Back / Return
 5/Multi CH	 5	 Pause/<	 Pause / Step / Freeze
 6/DVD	 6	 Play	 Play / Slow
 7/Tape	 7	 Stop	 Stop / Hold
 8/Tuner	 8	 <<	 << / Tune-
 9/CD	 9	 >>	 >> / Tune+
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 <<	 << / Preset-
 0/11/Dimmer	 0	 >>	 >> / Preset+
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Stereo	 Sound / Title
 Guide/Top	 D.Menu / Top	 Surround	 Eject / Surround
 Up	 Up	 < Listening Mode	 CH- / Page-
 Previous Menu/Muting	 Menu / Home	 Listening Mode >	 CH+ / Page+
 Left/Playlist/Cat	 Left	 Test Tone/Audio	 Audio / Lang I/II

Original	Substitut	Original	Substitut
 Enter	 OK	 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /	 Down	 Down
 Return	 Back / Return	 Pause/<	 Pause / Step / Freeze
 Play	 Play / Slow	 Stop	 Stop / Hold
 <<	 << / Tune-	 >>	 >> / Tune+
 <<	 << / Preset-	 >>	 >> / Preset+
 Stereo	 Sound / Title	 Surround	 Eject / Surround
 < Listening Mode	 CH- / Page-	 Listening Mode >	 CH+ / Page+
 Test Tone/Audio	 Audio / Lang I/II		





Original		Substitut		Original	Substitut
	CH Sel/Subtitle		Smart / List		
	Level-/Random		Blue / Prime Video / Random		
	Level+ / Repeat		Green / APP / Repeat		
	Display		Display / Media		
	Play Mode VCR		AV / Input / RDS		
	L.Night/DVD		Sleep / Timer		
	Cine FLTR/HDD		TV/Radio /		





 

 



 



 

 

 

 



 

 





 

 

 







 







Original	Substitut	Original	Substitut
 Standby	 Power	 Pause /<	 Pause / Step / Freeze
 1/VCR/DVR	 1	 Play	 Play / Slow
 2/CBL/SAT	 2	 Stop	 Stop / Hold
 3/Game/TV	 3	 <<	 << / Tune-
 4/AUX	 4	 >>	 >> / Tune+
 5/Multi CH	 5	 I<<	 I<< / Preset-
 6/DVD	 6	 >>I	 >>I / Preset+
 7/Tape	 7	 Stereo	 Audio / Lang I/II
 8/Tuner	 8	 Surround	 Eject / Surround
 9/CD	 9	 < Listening Mode	 Left
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Listening Mode >	 Right
 0/11/Dimmer	 0	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Disc/Album CH-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		

Original	Substitut	Original	Substitut
 Standby	 Power	 Pause /<	 Pause / Step / Freeze
 1/VCR/DVR	 1	 Play	 Play / Slow
 2/CBL/SAT	 2	 Stop	 Stop / Hold
 3/Game/TV	 3	 <<	 << / Tune-
 4/AUX	 4	 >>	 >> / Tune+
 5/Multi CH	 5	 I<<	 I<< / Preset-
 6/DVD	 6	 >>I	 >>I / Preset+
 7/Tape	 7	 Stereo	 Audio / Lang I/II
 8/Tuner	 8	 Surround	 Eject / Surround
 9/CD	 9	 < Listening Mode	 Left
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 Listening Mode >	 Right
 0/11/Dimmer	 0	 Level-/Random	 Blue / Prime Video / Random
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Level+/Repeat	 Green / APP / Repeat
 Disc/Album	 CH+ / Page+	 Display	 Display / Media
 Disc/Album CH-	 CH- / Page-		
 Vol+	 Vol+		
 Vol-	 Vol-		





Original	Substitut	Original	Substitut
 Standby	 Power	 <<	 << / Tune-
 1/VCR/DVR	 1	 Stereo	 Audio / Lang I/II
 2/CBL/SAT	 2	 Surround	 Eject / Surround
 3/Game/TV	 3	 < Listening Mode	 Left
 4/AUX	 4	 Listening Mode >	 Right
 5/Multi CH	 5	 Play Mode/VCR	 OK
 6/DVD	 6	 L.Night/DVD	 Sleep / Timer
 7/Tape	 7		
 8/Tuner	 8		
 9/CD	 9		
 +10/10/-/-/D.Tun	 Guide / EPG / -/-		
 0/11/Dimmer	 0		
 Disc/Album	 CH+ / Page+		
 Disc/Album CH-	 CH- / Page-		
 Pause/<	 Pause / Step / Freeze		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

