 



 

 



 




 




 

 



 

 



 






Original	Substitut
	 Power
	 Mute
	 Smart
	 3D
	 TV/R
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Info
	 Menu

Original	Substitut
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Play
	 Pause
	 Vol +
	 Vol -
	 Subt
	 Back
	 Options
	 Stop
	 Dual
	 Shift + Sleep
	 AV
	 Media



