

 


 

 

 

 
 




 





 






















 








 

 

 



 

 

 













 

 

 

Original	Substitut	Original	Substitut
	Guide		Guide / EPG / -/--
	Power		Power
	Eject		Eject / Surround
	Tv/Radio		TV/Radio /
	Red/Goto		Red / Netflix / Search
	Green/Angle		Green / APP / Repeat
	Yellow/Repeat		Yellow / YouTube / Repeat
	Blue/A-B		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	Text		Text / Goto
	Freeze/Hold		Shift + Pause / Step /
	D.Menu		D.Menu / Top
	Subtitle		Subtitle / EQ
	Zoom/Size		Zoom / Size
	Aspect		Shift + Picture / Format
	Subpage		Info / Angle
	Media		Shift + Display / Media

Original	Substitut	Original	Substitut
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	D.Setup		Setup / OPT /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I/Index		>>I / Preset+
	Menu		Menu / Home
	Lang/Audio		Audio / Lang I/II
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Sleep		Sleep / Timer
	Down		Down





Original	Substitut
	Exit / Cancel / Clear
	Exit / Cancel / Clear
	Vol+
	Vol+
	Mute / Dimmer
	Mute / Dimmer
	CH+ / Page+
	CH+ / Page+
	Vol-
	Vol-
	Display / Media
	Display / Media
	CH- / Page-
	CH- / Page-
	1
	1
	2
	2
	3
	3
	4
	4
	5
	5
	6
	6
	7
	7
	8
	8
	9
	9
	Shift + Guide / EPG / -/--
	Shift + Guide / EPG / -/--

Original	Substitut
	0
	0
	Back / Return
	Back / Return
	AV / Input / RDS
	AV / Input / RDS
	Picture / Format
	Picture / Format
	Sound / Title
	Sound / Title

