
 




 






 




 



















Original	Substitut		
	Power		Power
	TV		TV/Radio /
	TV		Shift + 1
	Subtitle		Subtitle / EQ
	Teletext/MHEG		Text / Goto
	Source		AV / Input / RDS
	Red/Demo		Red / Netflix / Search
	Green/SceneA		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/AD		Blue / Prime Video / Random
	Blue/AD		Audio / Lang I/II
	Home		Menu / Home
	Guide		Guide / EPG / -/--
	Options		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK

Original	Substitut		
	Right		Right
	Back/P/P		Back / Return
	Down		Down
	Info		Info / Angle
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	[<>]/Format		Shift + Picture / Format
	P-		CH- / Page-
	1		1



