 






 











 


 


Original	Substitut	Original	Substitut
	Power		Power
	Info		Info / Angle
	Lang		Audio / Lang I/II
	Mute		Mute / Dimmer
	[...]		Subtitle / EQ
	♥		Fav / Marker / PC
	▲		Shift + Up
	[≡]		Text / Goto
	EPG		Guide / EPG / -/-
	▼		Shift + Down
	Menu		Menu / Home
	CH+		CH+ / Page+
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK

Original	Substitut	Original	Substitut
	Right		Right
	Vol+		Vol+
	List		Smart / List
	CH-		CH- / Page-
	Down		Down
	←		Back / Return
	1		1
	2		2
	3		3
	[<>]		Picture / Format
	4		4
	5		5
	6		6
	TV/R		TV/Radio /
	7		7
	8		8
	9		9





Original	Substitut
	
	
I<<	I<< / Preset-
	
<<	<< / Tune-
	
>>	>> / Tune+
	
>>	>> / Preset+
	
Play	Play / Slow
	
Pause	Pause / Step / Freeze
	
Stop	Stop / Hold
	
Rec	Rec / Rec Mode
	
Red/Timer	Sleep / Timer
	
Red/Timer	Red / Netflix / Search
	
Eject	Eject / Surround
	
Green	Green / APP / Repeat
	
Yellow	Yellow / YouTube / Repeat
	
Blue	Blue / Prime Video / Random

Original	Substitut

