 

 




Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 /--	 Shift + Guide / EPG / /--
 Recall	 Back / Return
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format

Original	Substitut
 Input	 AV / Input / RDS
 Info	 Info / Angle
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Original	Substitut
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Home / Menu /
	Setup / OPT /
	Display / Media
	Text / Goto
	Play / Slow
	Guide / EPG / -/--
	I<< / Preset-
	Stop / Hold
	Rec / Rec Mode
	Zoom / Size
	Pause / Step / Freeze
	<< / Tune-
	TV/Radio /
	>> / Tune+

Original	Substitut
	Smart / List
	Subtitle / EQ
	>>I / Preset+
	Eject / Surround

